

**CommandLIFT™**  
REMOTE DOOR SYSTEM  
[www.commandlift.com](http://www.commandlift.com)



**United States**  
1 (716) 542-5427



**CANADA**  
1 (905) 333-6745



Issue: 110919 (En)

# Remote Control Transmitter


# Programming Additional CommandLIFT™ Remote Control Transmitters

The **CommandLIFT™** comes with two Remote Control transmitters that are pre-programmed for your motor unit. The **CommandLIFT™** will allow additional Remote Control transmitters to be programmed to the motor unit. These additional Remote Control transmitters must be programmed into the **CommandLIFT™** system by following these steps:

1. Remove the cover from the **CommandLIFT™** Electronic Command Module.
2. Locate the small **WHITE** button shown with the Red arrow (see picture below).
3. Press the **WHITE** button briefly and the small **RED** light will glow.
4. While the RED light is ON, press the button on the new Remote Control transmitter. Press this button again and the **RED** light will go out, and the new transmitter is programmed for your motor unit. Press the button again and the door will operate

You can also erase the **CommandLIFT™** memory of all the programmed transmitters and re-program a new set of transmitters by following these steps:

1. Press and hold the **WHITE** button approximately 10 seconds. Release the button and the small **RED** light will flash 5 times. All memory of existing transmitters has been erased.
2. Follow Steps 2 to 4 above and the new transmitters will be programmed for your system.
3. Each new transmitter will have to be programmed separately.

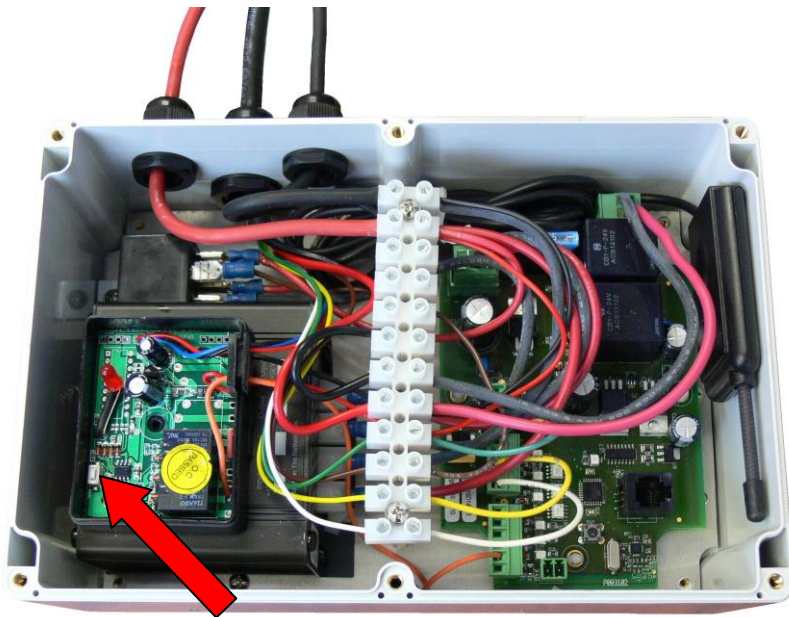

Programming Button


Electronic Command Module shown with Cover Removed

## Changing the Battery in the Remote Control Transmitters

If the Roll-Up door does not operate when the button on the remote control transmitter is pressed, check the Blue light on the transmitter to make sure it is working. If the Blue light flashes, or does not light at all, then the battery in the transmitter needs to be replaced.



1. Using a small Phillips screwdriver, carefully remove the three small screws from the back of the transmitter housing and remove the rear cover of the transmitter.

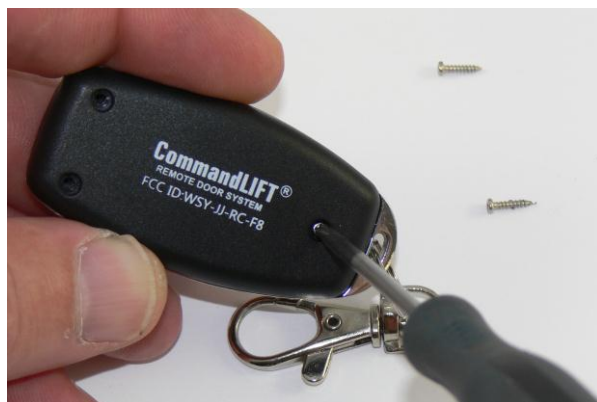

2. With the cover removed, you will see the two CR2016 button cell batteries. Carefully remove the batteries from the transmitter and replace them. Make sure to replace the batteries in the same orientation as they were removed. + facing up.
3. After replacing the cover, confirm that the Blue light on the transmitter is working properly. The Remote Control does NOT need to be reprogrammed.

